

The status page of TightGate-Pro

TightGate-Pro has an internal status page that can be called up via the browser of a logged-in VNC user. It provides basic information about the running system and the most important system services without the need to call up the administration menus. The system statuses are signalled by displaying values and an eye-catching red/green marking.

The status page can be called up in the browser using <http://localhost> in the browser.

Access to the status page is usually provided with access protection. The access data is as follows:

User name: **status**

Password: As per password slip or [Password set by the administration](#)

Caution

If no password is assigned, the status page can be viewed by any logged-in VNC user via the browser!

The status page also provides information about the correct functioning of the server-side virus scanner, if one is installed. In this case, the update time of the malware definition files (virus signatures) is also displayed. If the signatures are older than three days, the status display changes to red. In this case, there could be a configuration error or the update server in question is not available.

Note

No changes can be made to the displayed parameters on the status page. The values are only used to provide information on basic operating statuses. The administration menus and the various administration roles are used to administer the system. For detailed monitoring of the system operation, a [Monitoring](#) is recommended, especially as numerous system-specific sensors and checkpoints are available for TightGate-Pro in addition to the regular Nagios system monitoring functions.

Structure of the status page

The status page of TightGate-Pro is divided into four sections, which are structured as follows:

tgintel.intern.netz **Abschnitt 1**
Interface 1 / bond1 192.168.1.252 net 192.168.1.0/24 vif 1000mbitslave1-1,UP:1000Mbit

TightGate-Pro Version 2.0.393 **Abschnitt 2**
Status: OK, last update: 2025-03-28 08:58 CEST
 Update: OK, last update: 2025-03-28 08:58 CEST

Überblick

Laufzeit: 8:32
 Last: 0.99 / 0.89 / 0.65
 VNC-Verbindungen: lokal 6, im Cluster 6 von 25 (+3 priv.)
 Kundennummer: 10299
 Lizenz: Ablauf 31. Okt 2080
 Avast-Signaturen: Di 4. Jul 2025

Abschnitt 3

Dienste

SSH-Fernzugriff	OK	VNC-Dienst	OK
Cron-Systemdienst	OK	NTP-Zeit synchronisation	OK
RAID-Dienst	OK	System-Überprüfen	OK
Nagios-NRPE	OK	SNMP-Dienst	OK
Squid WWW-Proxy	OK		



Weitere Dienste

- Massenspeicher
- Cluster-Status
- System-Statistiken
- Verbindungs-Statistik
- MME-Liste als CSV

Abschnitt 4



Section 1

The DNS name of TightGate-Pro is displayed in the first section. This is followed by the defined network interfaces with the respective IP, netmask and the transmission speed in brackets.

Section 2

The second section shows the version number of TightGate-Pro. This should be included in any support enquiries. Information on the status and update is also provided below the version. The line **Status** line indicates when the status page was last updated. It is updated automatically every two minutes. The line **Updates** line indicates the last time the TightGate-Pro system searched for available updates on the Internet.

Section 3

Section 3 begins with an overview of various TightGate-Pro specific data. The runtime and licence type for TightGate-Pro and the virus scanner are displayed, as well as the current load and the number of currently active connections.

The overview is followed by an overview of running services on TightGate-Pro. The overview shows all services that have been configured as administrator **config** have been activated. If a service is activated as **config** is deactivated, it is not displayed. Normally, all services should have a green **ok** should be displayed. If individual services are marked with a red **-o-** there is an error for the service.

Section 4

This section can be used to display additional services from TightGate-Pro. The following services are available

Service	Description
Mass storage	This menu item provides an overview of the hard disk utilisation of TightGate-Pro. It shows how much of the individual partitions of TightGate-Pro are already occupied and what temperature was measured for the installed hard disk(s).
Cluster status (optional)	The Cluster status menu item is only displayed for TightGate-Pro systems that are part of a cluster and also work as load balancers within the cluster. The menu item provides an overview of all TightGate Pro systems in the cluster with their respective status in terms of availability, degree of utilization and planned backup and update times.
System statistics	The system statistics provide time-based analyses of TightGate-Pro for memory, temperature, load, etc. The statistics provide an overview of the last hour, the last day, the last week and the last month.
Connection statistics	Statistics on TightGate-Viewers connections to TightGate-Pro over the last day, week and month can be displayed here.

Service	Description
MIME list as CSV	This menu item can be used to download a list of all MIME types available in TightGate-Pro as a CSV file.

From:
<https://help.m-privacy.de/> -

Permanent link:
<https://help.m-privacy.de/doku.php/en:tightgate-pro:anhang:statusseite>

Last update: **2025/03/28 08:57**

